


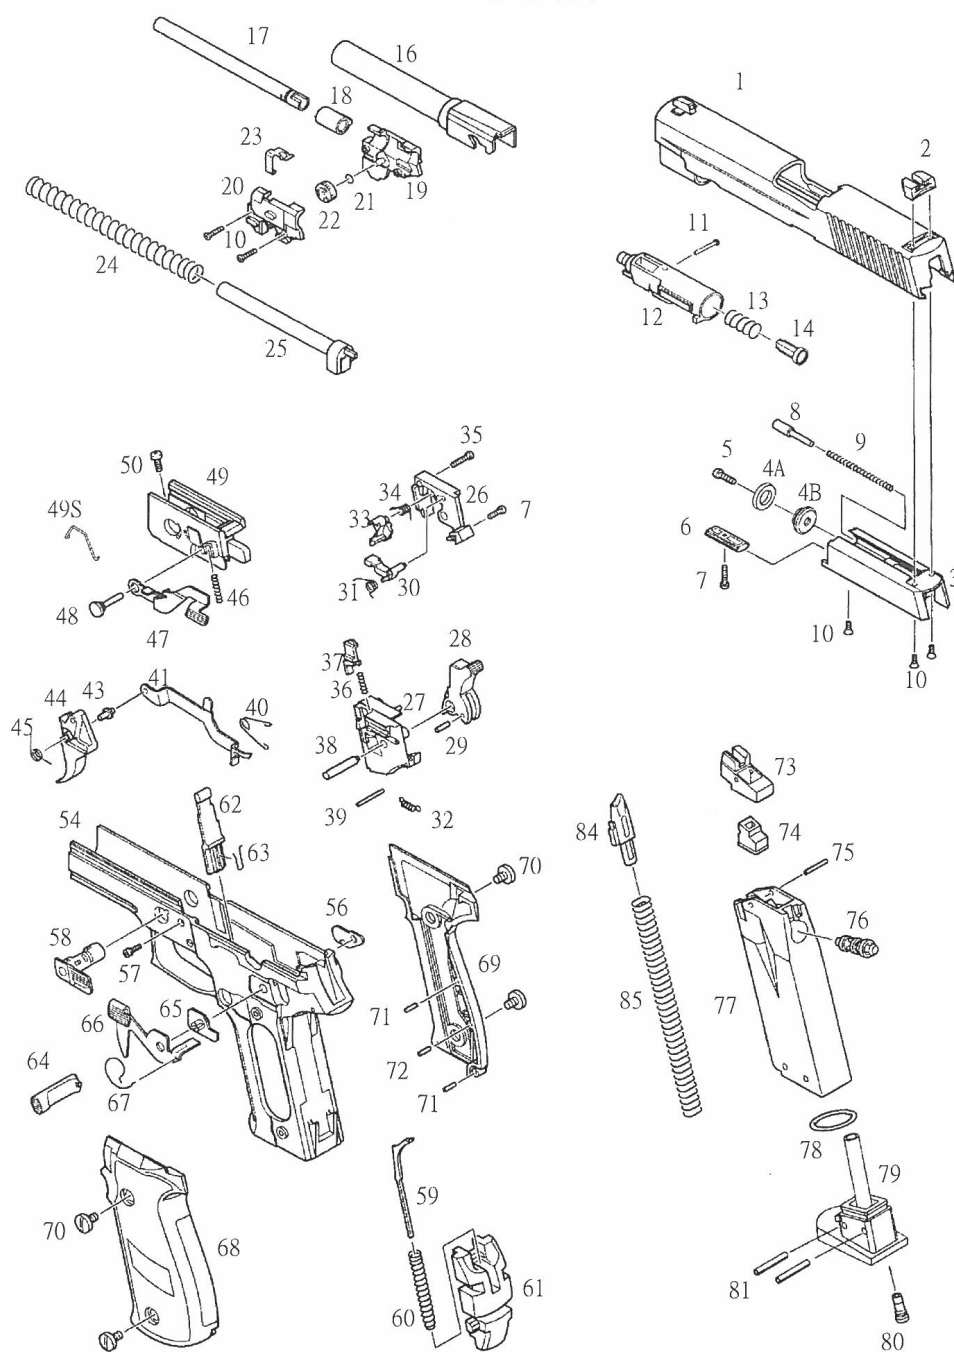

NO.	NAME
1	SLIDE
2	REAR SIGHT
3	PISTON
4A	PISTON CAP
4B	PISTON CAP BASE
5	PISTON SCREW
6	PISTON PARTS
7	PISTON PARTS SCREW
8	RETURN PLUNGER
9	CYLINDER RETURN SPRING
10	SCREW
11	CYLINDER PIN
12	CYLINDER
13	CYLINDER VALVE SPRING
14	CYLINDER VALVE
16	OUTTER BARREL
17	INNER BARREL
18	RUBBER CHAMBER
19	CHAMBER COVER(RIGHT)
20	CHAMBER COVER(LEFT)
21	O RING
22	ADJUST DIAL
23	ADJUST LEVER
24	RECOIL SPRING
25	RECOIL SPRING GUIDE
26	REAR CHASSIS (RIGHT)
27	REAR CHASSIS (LEFT)
28	HAMMER
29	HAMMER PIN
30	KNOCKER
31	KNOCKER SPRING
32	KNOCKER RETURN SPRING
33	SEAR
34	SEAR SPRING
35	SCREW
36	KNOCKER LOCK SPRING
37	KNOCKER LOCK
38	HAMMER PIN
39	REAR CHASSIS
40	TRIGGER BAR SPRING
41	TRIGGER BAR
42	SAFETY BAR
43	TRIGGER BAR SHAFT

NO.	NAME
44	TRIGGER
45	TRIGGER SPRING
46	SLIDE STOP SPRING
47	SLIDE STOP
48	TRIGGER SHAFT
49	FRONT CHASIS
49S	TAKE DOWN SPRING
50	SCREW
54	FRAME
55	SCREW
56	MAGAZINE OBTAINING COVER
57	SCREW
58	TAKEDOWN LEVER
59	HAMMER STRAT
60	HAMMER SPRING
61	HAMMER SPRING HOUSE
62	MAGAZINE OBTAINING STOPPER
63	MAGAZINE OBTAINING SPRING
64	MAGAZINE OBTAINING
65	DECOCKING LEVER BEARING
66	DECOCKING LEVER
67	DECOCKING SPRING
68	GRIP (LEFT)
69	GRIP (RIGHT)
70	GRIP SCREW
71	SPRING PIN
72	SPRING PIN
73	BB LIP
74	MAGAZINE GASKET
75	BB LIP PIN
76	VALVE
77	MAGAZINE CASE
78	O RING
79	MAGAZINE BASE
80	FILLING VALVE
81	MAGAZINE BASE PIN
84	FOLLOWER
85	FOLLOWER SPRING