

1866 CO₂ RIFLED BARREL


HOW TO CHANGE THE INNER BARREL AND CALIBER ADAPTER (part #1-24)

TOOLS YOU WILL NEED:


- 1 Rubber Mallet
- 1 Metal Pin Punch (1/16 in or 1.5 mm)




Remove any CO₂ and ammunition from the gun before starting this process.

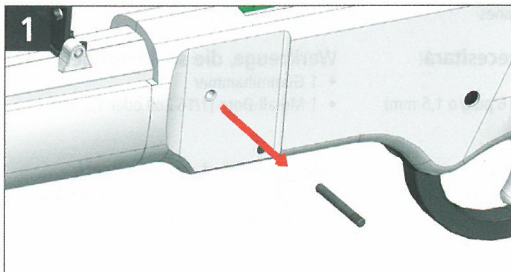


Remove the receiver pin with a punch and mallet from right to left. Take care not to damage the surface of the receiver. Receiver damage is not covered by warranty.

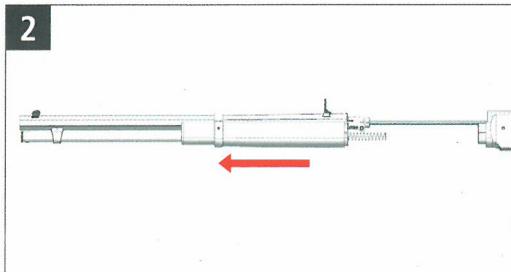


Slide the entire front barrel assembly off to separate it from the receiver.

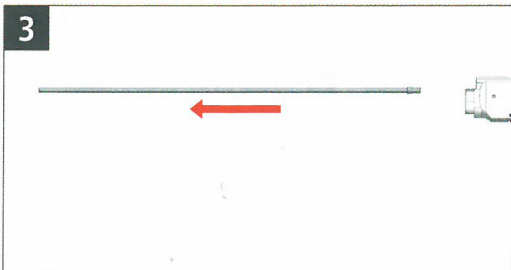


Remove the inner barrel from the receiver.

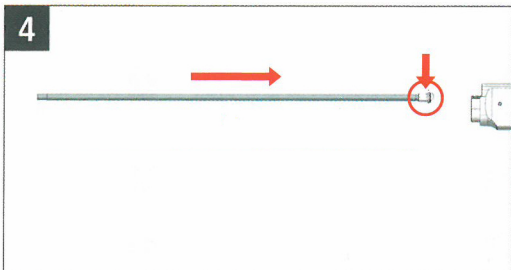

Attach the caliber adapter to the inner barrel you are preparing to install. Insert the inner barrel with installed caliber adapter into the front barrel assembly.

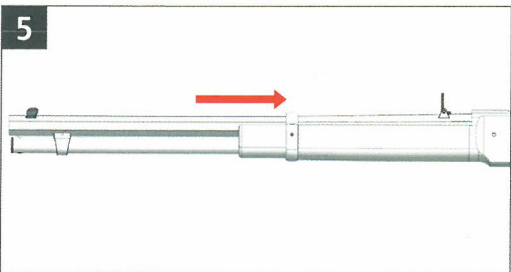

Attach the front barrel assembly to the receiver.

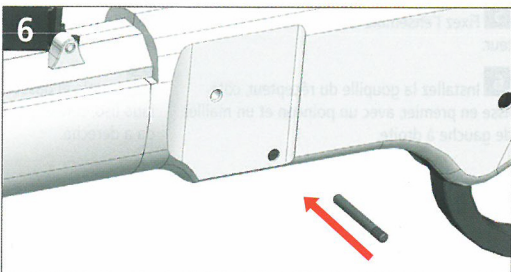

Install the receiver pin, smooth side first, with a punch and mallet from left to right.